


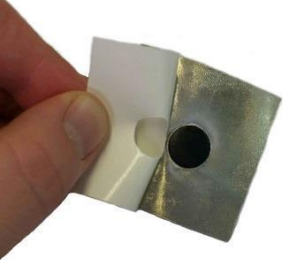










# Universal Compact Sprayhood Attachment Instructions

		
<p><b>Items required:</b> 1 x Sprayhood. 1 x Press stud self-adhesive patch.</p>	<p><b>1. Unpack the lifejacket from its cover and open up the bladder with the printed side facing upwards as shown in the picture.</b></p>	<p><b>2. Locate the area on the bladder for the position of the press stud patch (four corner marks circled in red). Ensure it is clean &amp; dry.</b></p> <p><b>If your lifejacket does not have the allocated markings please refer to service station.</b></p>
		
<p><b>3. Carefully peel the backing paper off the press stud patch from the outer edges to tear the paper around the press stud.</b></p>	<p><b>.4. Apply the press stud patch to the allocated area on the bladder, then press firmly to secure the patch.</b></p>	<p><b>5. Lay sprayhood out on top of the lifejacket as shown. And locate the neck loop (circled in red).</b></p>

		
<p>6. Open up the hook &amp; loop attachment strap that is fixed to the lanyard on the sprayhood and fold the hook &amp; loop around the neck loop.</p>	<p>7. The attachment should now look as shown in the picture.</p>	<p>8. Locate the loop patch on the sprayhood cap.</p>
		
<p>9. Fix the sprayhood to the hook &amp; loop strap that is attached to the neck loop.</p>	<p>10. Fasten the lanyard securely to the press stud patch which was affixed to the bladder in step 4.</p>	<p>11. The sprayhood is now attached to the lifejacket. Repack the lifejacket according to the manufacturer's instructions.</p>

**NOTE:** Please note that your lifejacket may differ slightly from that shown in the photographs depending on which lifejacket model you have purchased, but all are attached in the same manner.